


STANDARD EQUIPMENT		QTY
<b>A</b>	AP4.0—Application Processor	1
<b>B</b>	PS-AP50W-12V—AP4.0 Power Supply/ Cable	1
<b>C</b>	Touch Screen Display	1
<b>D</b>	Touch Screen Cables—One CV-1 DP++ cable, One USB cable (BOTH REQUIRED)	1
<b>E</b>	LE-R-50—Lynx 50" Stroke/Velocity Encoder	1
<b>F</b>	CE-LX5-4M-F90—Lynx Four-Meter 90° Cable	1 <sup>3</sup>
<b>G</b>	CE-LX5-2M—Lynx Two-Meter Cable	1 <sup>2</sup>
<b>H</b>	CE-LX5-4M—Lynx Four-Meter Cable	1 <sup>3</sup>
<b>I</b>	J-LX1—Lynx Single Feed-Through	1
<b>J</b>	ID7-M-SEQ—Lynx Sequence Module	1
<b>K</b>	C-ID7-M-3M—Shielded Cable for ID7-M-SEQ	1 <sup>1</sup>
<b>L</b>	OR2-M—Lynx Relay Module OR OA1-M-V—Lynx Analog Output Module	1 <sup>5</sup>
<b>M</b>	C-OR2-M-3M—Shielded Cables for OR2-M	2 <sup>1,5</sup>
<b>N</b>	IA1-M-V—Lynx Analog Input Module	1
<b>O</b>	C-IA1-M-3M—Shielded Cable for IA1-M-V	1 <sup>1</sup>
<b>P</b>	J-LX5—Lynx Five-Port Junction Box	1
OPTIONAL EQUIPMENT		QTY
<b>U</b>	L-PX—Lynx Proximity Switch	1 <sup>1,4</sup>

<sup>1</sup> Item not shown.  
<sup>2</sup> For standard installation; use of L-PX requires a quantity of 3.  
<sup>3</sup> For standard installation; use of L-PX requires a quantity of 2.  
<sup>4</sup> Only used if mold closed signal is not available from the ID7-M-SEQ sequence module.  
<sup>5</sup> OA1-M-V used for control (V→P) if OR2-M cannot be utilized.

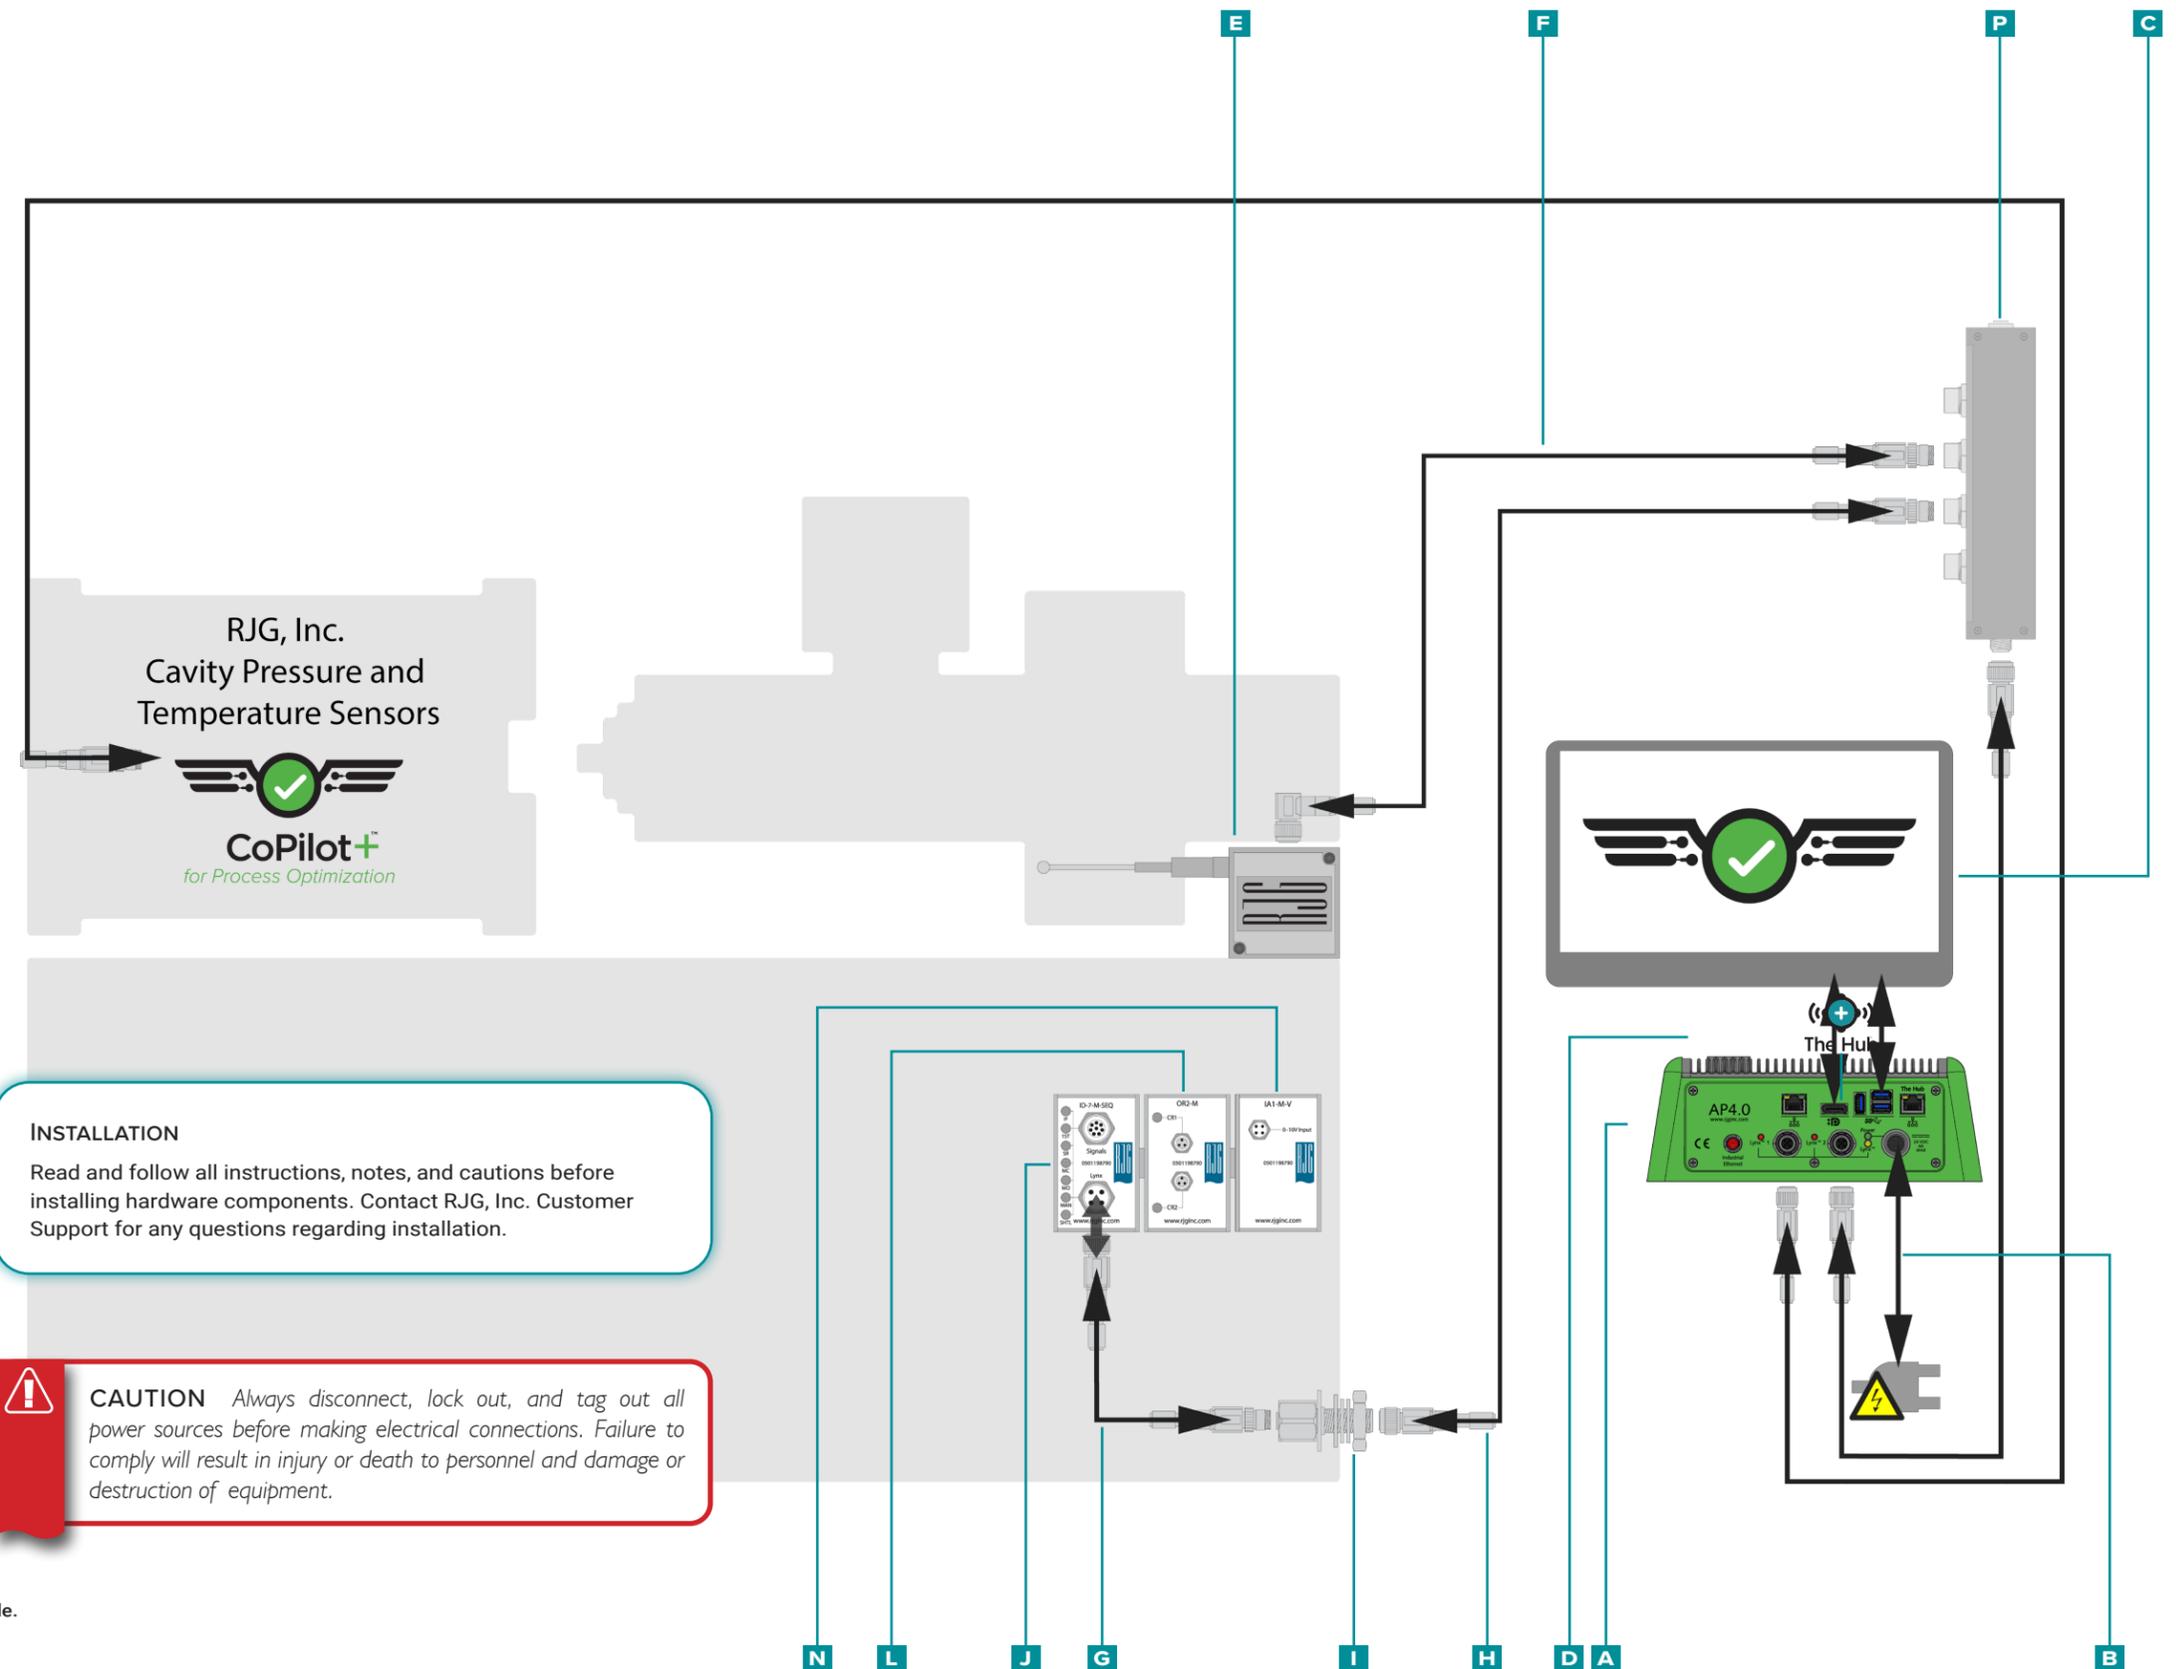


**INSTALLATION**  
 Read and follow all instructions, notes, and cautions before installing hardware components. Contact RJG, Inc. Customer Support for any questions regarding installation.

**CAUTION** Always disconnect, lock out, and tag out all power sources before making electrical connections. Failure to comply will result in injury or death to personnel and damage or destruction of equipment.

STANDARD EQUIPMENT		QTY
<b>A</b>	AP4.0—Application Processor	1
<b>B</b>	PS-AP50W-12V—AP4.0 Power Supply/ Cable	1
<b>C</b>	Touch Screen Display	1
<b>D</b>	Touch Screen Cables—One CV-1 DP++ cable, One USB cable (BOTH REQUIRED)	2
<b>E</b>	LE-R-50—Lynx 50" Stroke/Velocity Encoder	1
<b>F</b>	CE-LX5-4M-F90—Lynx Four-Meter 90° Cable	1 <sup>3</sup>
<b>G</b>	CE-LX5-2M—Lynx Two-Meter Cable	1 <sup>2</sup>
<b>H</b>	CE-LX5-4M—Lynx Four-Meter Cable	1 <sup>3</sup>
<b>I</b>	J-LX1—Lynx Single Feed-Through	1
<b>J</b>	ID7-M-SEQ—Lynx Sequence Module	1
<b>K</b>	C-ID7-M-3M—Shielded Cable for ID7-M-SEQ	1 <sup>1</sup>
<b>L</b>	OR2-M—Lynx Relay Module OR OA1-M-V—Lynx Analog Output Module	1 <sup>5</sup>
<b>M</b>	C-OR2-M-3M—Shielded Cables for OR2-M	2 <sup>1,5</sup>
<b>N</b>	LS-H-1/4NPT-3K—Lynx 3,000 lb. Hydraulic Pressure Sensor	1
<b>O</b>	CE-LX5-2M—Lynx Two-Meter Cable	1
<b>P</b>	J-LX5—Lynx Five-Port Junction Box	1
OPTIONAL EQUIPMENT		QTY
<b>U</b>	L-PX—Lynx Proximity Switch	1 <sup>1,4</sup>

<sup>1</sup> Item not shown.  
<sup>2</sup> For standard installation; use of L-PX requires a quantity of 3.  
<sup>3</sup> For standard installation; use of L-PX requires a quantity of 2.  
<sup>4</sup> Only used if mold closed signal is not available from the ID7-M-SEQ sequence module.  
<sup>5</sup> OA1-M-V used for control (V→P) if OR2-M cannot be utilized.

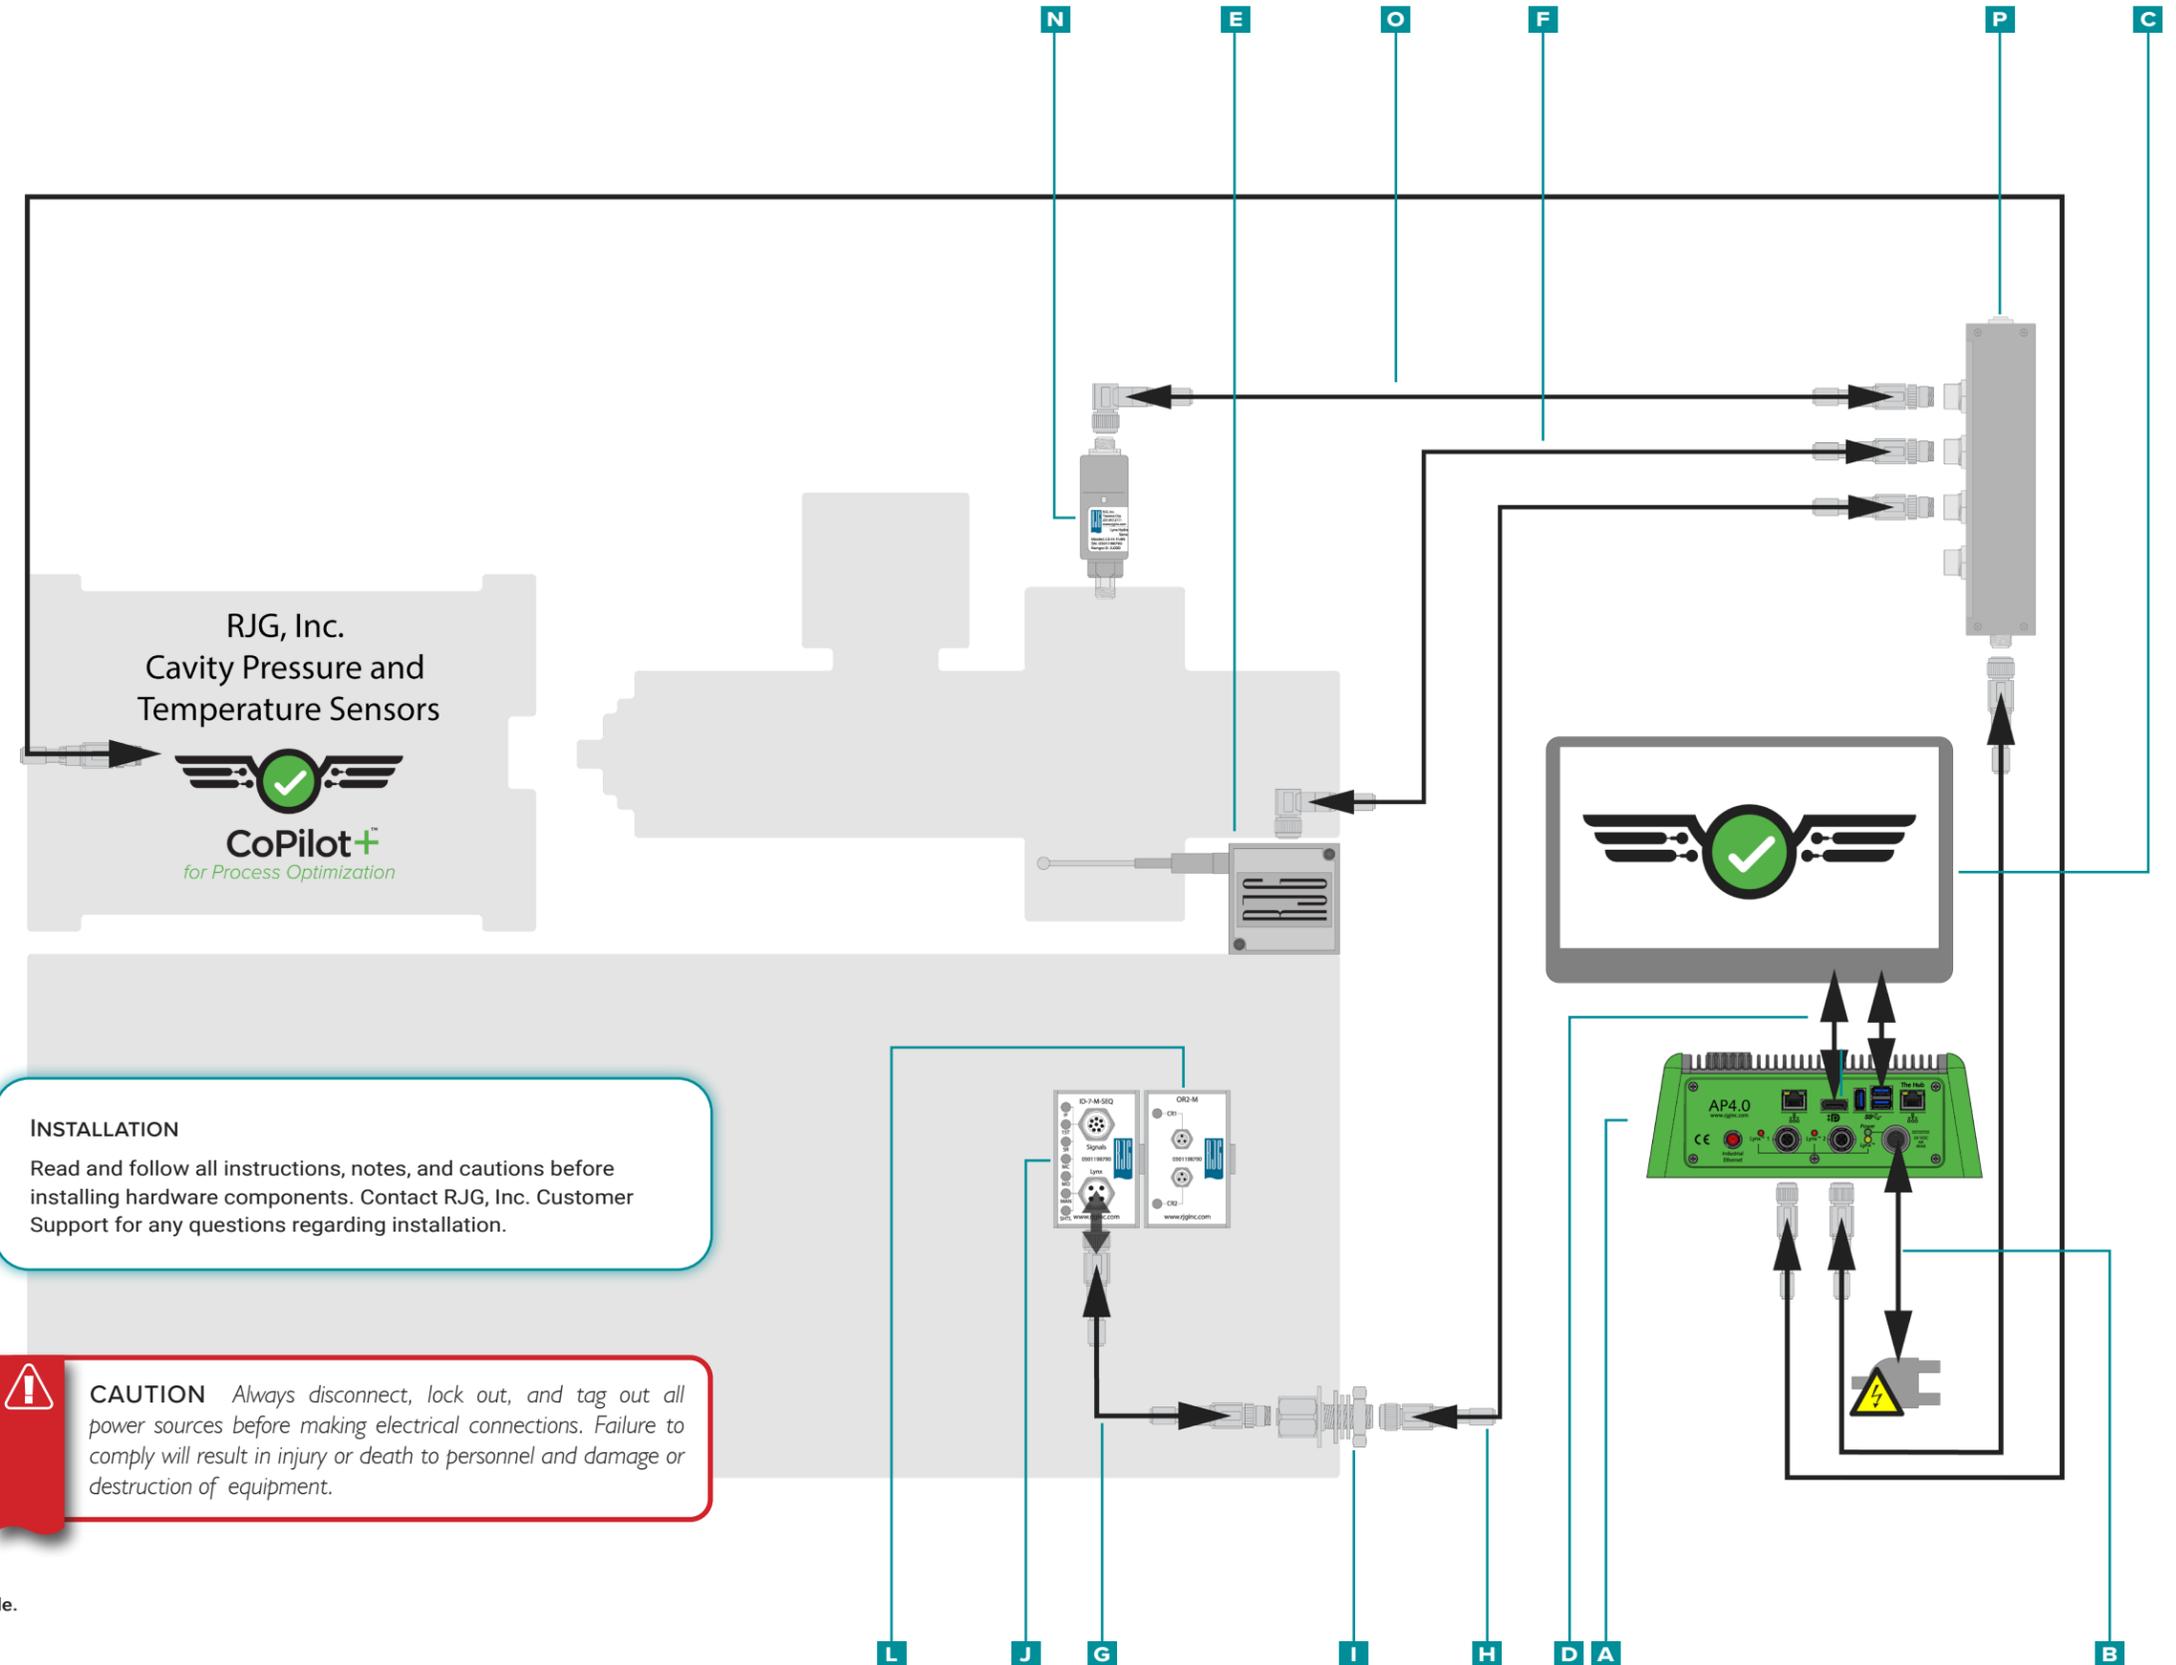

**INSTALLATION**  
 Read and follow all instructions, notes, and cautions before installing hardware components. Contact RJG, Inc. Customer Support for any questions regarding installation.

**CAUTION** Always disconnect, lock out, and tag out all power sources before making electrical connections. Failure to comply will result in injury or death to personnel and damage or destruction of equipment.